

## Sound Powered Telephones

Handsets are available with or without push buttons and with coiled cordsets, straight cordsets or armored cable. Coiled (**R**) and straight (**S**) cordsets terminate in either alligator clips (**C**) or a phone plug (**P**). Armored cable (**AR**) models terminate in tinned wires. The handset pictured to the right is **MODEL SPT-550 RP**.

Description	Model Number
No Push Button, coiled cord, plug	SPT-525 RP
No Push Button, coiled cord, clips	SPT-525 RC
No Push Button, straight cord, plug	SPT-525 SP
No Push Button, straight cord, clips	SPT-525 SC
No Push Button, armored cable	SPT-525 AR
Push Button, coiled cord, plug	SPT-550 RP
Push Button, coiled cord, clips	SPT-550 RC
Push Button, straight cord, plug	SPT-550 SP
Push Button, straight cord, clips	SPT-550 SC
Push Button, coiled cord, plug, PTT	SPT-552 RP
Push Button, straight cord, plug, PTT	SPT-552 SP



The handset push button is the equivalent to a hang-up switch. Handsets without push buttons are therefore always on and are best limited to applications involving simple pair-phone operation. Handsets with push buttons are off-line until the push button is depressed and are intended for multi-phone set-ups. The PTT handset is wired so that only the transmitter is activated by the push button. The receiver is always on. This configuration is required by certain fire codes relating to high rise buildings.